



This page is intended for user reference on the LED animations that may appear when using the UniKey SR2 Reader.


Each animation corresponds with a specific response from the SR2 and can be customized individually for the user's commercial organization. Other animation colors as well as various presentation styles are just some of the alternatives available for the UniKey SR2.

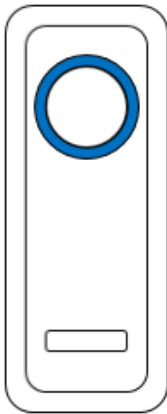


*Blue Idle:*  
The reader is properly enrolled and is idly waiting for an access attempt.

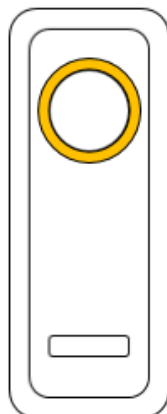


*Amber Idle:*  
The reader is connected to power but is not enrolled to an organization or end-users.

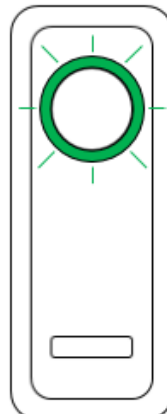


*Green Flash:*  
The reader has granted entry to the access attempt.

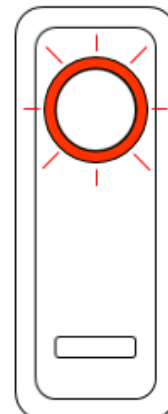


*Red Flash:*  
The reader has denied entry to the access attempt.

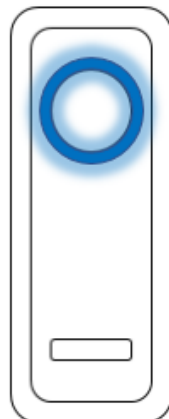

*Blue Spin:*  
An access attempt has been made and the reader is processing.

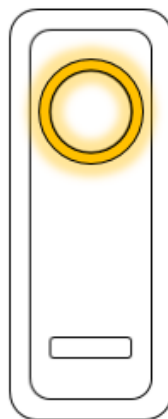

*Amber Spin:*  
The reader is going through the booting process of powering on.

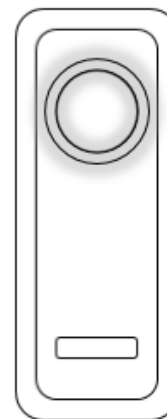

*White Spin:*  
The reader is going through the reboot process of a factory reset.

#### Related Documents

### **AN1005: SR2 Administrator FAQ**

UniKey SR2 information on required power settings, mobile device and mobile app configuration and management, as well as necessary credential information for organization administrators.

### **AN1006: SR2 End-User FAQ**

UniKey SR2 information on required mobile device and mobile app settings, management, and credential information needed from an end user standpoint.

### **UG1004: SR2 Installation**

Considerations for installing the SR2, the recommended settings, and certifications.

---

### Revision History

Revised By	Date	Version	Change Summary
EKC	11/2/2017	1.0	Initial Release